

# Electro-Boiler™

## EB-L-\*\* and EB-\*\* Series

Replacement Part #	Description
--------------------	-------------

<b>EB-L-13 / EB-13</b>	
D5639S	Square D 30-Amp Circuit Breaker
D5640S	Square D 60-Amp Circuit Breaker
5639	GE 30-Amp Circuit Breaker
5640	GE 60-Amp Circuit Breaker

<b>EB-L-18 / EB-18</b>	
D5640S	Square D 60-Amp Circuit Breaker
5640	GE 60-Amp Circuit Breaker

<b>EB-L-23 / EB-23</b>	
EMR3D8410	3 <sup>rd</sup> Stage Relay Board
D5639S	Square D 30-Amp Circuit Breaker
D5640S	Square D 60-Amp Circuit Breaker
5639	GE 30-Amp Circuit Breaker
5640	GE 60-Amp Circuit Breaker

<b>EB-L-27 / EB-27</b>	
EMR3D8410	3 <sup>rd</sup> Stage Relay Board
D5640S	Square D 60-Amp Circuit Breaker
5640	GE 60-Amp Circuit Breaker

Replacement Part #	Description
--------------------	-------------

<b>Common Parts for the EB-L-** and EB-** Series</b>	
EM5835C	Dual Fuel Control Module
EM5845	Dual Fuel Control Board
EB5515	Relay Board
5530	Inlet Emersion Aquastat
D5450	Aquastat Control
5456A	Pressure / Temperature Gauge
5126	30-Amp Two Pole Contactor Relay
5535	205° Manual Reset Limit
5537G	190° Auto Reset Limit
2232	Pump Terminal Block
1467	40VA Transformer with Pigtails
D5440	Square D 15-Amp Circuit Breaker
EB5520	4.5 kW Element with Gasket
UFUSE0440	2-Amp Fast Blow Fuse
5453	30 psi Relief Valve