

# Electric Mini-Boiler™

## Installation & Operating Instructions

EMB-S-1	120-volt, 1-stage	–	1.1 kW	3,753 Btu/h
EMB-S-2	120-volt, 1-stage	–	2.5 kW	8,530 Btu/h
EMB-S-4	120-volt, 2-stage	–	5 kW	17,060 Btu/h
EMB-S-5	240/208-volt, 1-stage	30A CB	4.5/3.5 kW	15,354/11,942 Btu/h
EMB-S-7	240/208-volt, 2-stage	45A CB	7/5.3 kW	23,885/17,913 Btu/h
EMB-S-9	240/208-volt, 2-stage	60A CB	9/7 kW	30,709/23,885 Btu/h

**Water Flow** – Minimum 0.3 GPM per kW water flow is required through boiler.

**Design Temperature Rise** – Typical radiant floor system should be designed at 12° to 15° F.

**Application** – Low temperature, low pressure, radiant underfloor heating systems. This model includes factory installed temperature sensing staging.

**Comment** – If this application is for traditional hydronic heating requiring temperatures greater than 160° F and capacities larger than shown above, contact factory for other Electro-Boiler product series.

- In this approximate sizing the EB-M\*-\*\* model series is fully modulating and designed for temperatures up to 180° F. The EB-M\* and EB-W\* also have outdoor reset options and other features.

**Accessories** – Attached BL001 lists various accessory or option items which are not part of basic Electro-Boiler.

**Note:** This product meets the requirements of the ASME Boiler and Pressure Vessel Code.

Conforms to: UL STD.UL834

Certified to: CSA STD.C22.2#165

DO NOT DESTROY THIS MANUAL. PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE BY A SERVICE TECHNICIAN.



**ELECTRO  
INDUSTRIES**

Monticello, Minnesota  
800.922.4138  
www.electromn.com

# TABLE OF CONTENTS

<u>Description</u>	<u>Page</u>
System Components	1
System or Water Flow	1
Temperature Sensing Staging Control	1
Room Thermostat Placement	1
Built-In Temperature Control	2
Water Flow Calculation	2
Installation Requirements	2
Electric Supply	3
Clearances	3
Mechanical Installation	4
Electrical Hookup	5
Water Fill Procedure	6
Operational Tips	8
Troubleshooting Helps	9
Drawings:	BX305 BH310 UAW411 BL001 XX017

## GENERAL

As stated, this product series applies to under floor hydronic heating. The basic **components** for an electric energy heating system typically include:

1. Electric Mini-Boiler itself – covered by this manual.
2. Thermostat hookup control – covered by this manual.
3. Plumbing kit or piping material at the boiler itself – can be ordered as a kit, reference catalog number EMB-PK.
  - a. These items are shown on plumbing installation drawing BX305.
4. Circulating pump – typically sized for head pressure and system flow requirement, typical catalog number EMB-P2.
5. The under floor circulating tubes and manifolds – provided and manufactured by others, not covered in this manual.

## APPROVED TUBING/PIPING

When plumbing this boiler and its peripheral parts to the loop system, all plumbing parts and/or tubing must be sealed to prevent entrance of oxygen.

**Use only tubing or polyethylene tubing with oxygen Diffusion Barrier (ie. PEX).**

## SYSTEM OR WATER FLOW

In order to prevent rapid stage cycling and long term deterioration of components and elements, it is important the water flow be greater than the specified 0.3 GPM per kW.

### WATER FLOW REQUIREMENTS (MINIMUM 0.3 GPM PER KW WATER FLOW THROUGH BOILER)

Model	Water Temperature Rise							
	Flow – 10° F/6° C		Head Loss		Flow – 20° F/11° C		Head Loss	
	gpm	lpm	ft	m	gpm	lpm	ft	m
EMB-S-1	.75	2.83	.01	.003	.37	1.39	.003	.001
EMB-S-2	1.7	6.43	.01	.006	.85	3.21	.02	.006
EMB-S-4	3.41	12.88	.08	.024	1.70	6.42	.04	.012
EMB-S-5	3.07	11.60	.06	.018	1.53	5.78	.02	.006
EMB-S-7	4.78	18.06	.12	.036	2.39	9.03	.06	.01
EMB-S-9	6.14	23.20	.23	.07	3.07	11.60	.10	.03

Note: Head Loss based on 110° F return temperature.

## TEMPERATURE SENSING STAGING CONTROL

This model series is factory equipped with a digital supply water sensor and a staging controller. The controller regulates the elements to maintain a preset maximum or preset operating temperature. The control board has a front panel screwdriver adjustment (see Operational Tips section) for setting the operating temperature point.

During initial turn on (slab stat call for heat) there is an initial pump on in attempt to stabilize the loop temperature followed by stage 1. After approximately 4 minutes if the water supply sensor value is still below the set point, stage 2 is turned on. At this point, the water temperature is sampled every 4 minutes to determine correct element sequence. Assuming proper flow, the element power will regulate to maintain this preset temperature.

## ROOM THERMOSTAT PLACEMENT

Comfort and proper space heating response is a direct relationship to the room thermostat type and the placement of the thermostat sensing bulb. Typically an under floor heating system can be broken down into two categories.

- **Energy storage, water tubing is under the concrete or within the sand base** - The controlling thermostat must have a remote bulb, and this remote bulb must sense the concrete slab temperature (slab stat). Coordinated with the concrete pour, install a ¾" PVC, minimum bend radius of 7 inches, and locate at approximately center (vertical) of the concrete slab. The thermostat sensing bulb can later be

pushed down this PVC conduit. If the slab is already poured without conduit for slab stat, use electronic remote sensing thermostat.

- **Quick response, hydronic tubing just under the concrete surface, no flooring material over the concrete** – slab stat is still suggested and preferred, but a standard wall mount room thermostat can be adequate. Mount room thermostat on an inside wall similar to most heating systems.

### SAFETY TEMPERATURE CONTROL

The hi-limits within this unit are for safety purposes only. The system installation must have a proper responding slab sensing thermostat or zone controlling device to properly turn the boiler on and off. If the water flow is greater than the nominal GPM specified, this boiler should not reach hi-limit and the hydronic loop should continue to flow in the normal heating pattern until the operating slab stat is satisfied. If hi-limiting is experienced prior to satisfying the operating slab stat, there is probably a water flow issue.

In addition to the built-in supply sensing point and electronic operating temperature control point, there is a 190° F automatic reset hi-limit and a 205° F top vessel manual reset hi-limit.

### INFORMATION/WATER FLOW CALCULATIONS

Water flow, GPM, can easily be calculated if the temperature rise across the electric boiler can be measured.

The formula below can only be used when the temperature rise is stable and the boiler is not hi-limiting. In other words, verify constant current draw and stable outlet temperatures for at least 15 minutes.

$$\text{GPM} = \frac{\text{Volts} \times \text{Amps} \times 3.4}{500 \times \text{Temp. rise}} \quad \text{Example: } \frac{240 \text{ volts} \times 36 \text{ amps} \times 3.4}{500 \times 10 \text{ degree rise}} = \frac{29376}{5000} = 5.8 \text{ gpm}$$

### INFORMATION/WATER FLOW CALCULATIONS – METRIC

$$\text{L/min} = \frac{\text{Volts} \times \text{Amps} \times 3.587}{251.04 \times \text{Temp. rise } ^\circ \text{C}} \quad \text{Example: } \frac{240 \text{ volts} \times 36 \text{ amps} \times 3.587}{251.04 \times 6^\circ \text{ C rise}} = \frac{30991.68}{1506.24} = 20.57 \text{ L/min}$$

### INSTALLATION REQUIREMENTS

1. All installation work must be performed by trained, qualified contractors or technicians. Electro Industries, Inc., sponsors installation and service schools to assist the installer. **Visit our web site at [electromn.com](http://electromn.com) for upcoming service schools.**

#### **WARNING**

ALL ELECTRICAL WIRING MUST BE IN ACCORDANCE WITH NATIONAL ELECTRIC CODE AND LOCAL ELECTRIC CODES, ORDINANCES, AND REGULATIONS.

#### **WARNING**

OBSERVE ELECTRIC POLARITY AND WIRING COLORS. FAILURE TO OBSERVE COULD CAUSE ELECTRIC SHOCK AND/OR DAMAGE TO THE EQUIPMENT.

#### **CAUTION**

This unit can only be used for its intended design as described in this manual. Any internal wiring changes, modifications to the circuit board, modifications or bypass of any controls, or installation practices not according to the details of this manual will void the product warranty, the ETL/Intertek certification, and manufacturer product liability. Electro Industries, Inc., cannot be held responsible for field modifications, incorrect installations, and conditions which may bypass or compromise the built-in safety features and controls.

2. This installation manual and Mini-Boiler products relate only to the addition of the Mini-Boiler to the hydronic system. The owner/ installer assumes all responsibility and/or liability associated with any needed installation of the gas/oil boiler, pump, plumbing, system design, hydronic systems or backup gas/oil boiler,

etc. Any instructions or comments made within this manual (or factory phone assistance) relating to the gas/oil furnace are provided as comments of assistance and “helps” only.

**⚠ CAUTION**

Hazards or unsafe practices could result in property damage, product damage, severe personal injury and/or death.

3. Remember, safety is the installer’s responsibility and the installer must know this product well enough to instruct the end user on its safe use.

Safety is a matter of common sense - - a matter of thinking before acting. Professional installers have training and experienced practices for handling electrical, sheet metal, and material handling processes. Use them.

**ELECTRIC SUPPLY**

Model	Volts	Phase	Watts	Btu/h	Amps	CB	Element	
							Stg 1	Stg 2
EMB-S-1	120	1-60 Hz	1,100	3,753	9.2	–	1	–
EMB-S-2	120	1-60 Hz	2,500	8,530	20.8	–	1	–
EMB-S-4	120	1-60 Hz	5,000	17,060	41.7	–	1	1
EMB-S-5	240/208	1-60 Hz	4,500/3,500	15,354/11,942	18.8/16.8	30A	1	–
EMB-S-7	240/208	1-60 Hz	7,000/5,300	23,885/17,913	29.2/25.2	45A	1	1
EMB-S-9	240/208	1-60 Hz	9,000/7,000	30,709/23,885	37.5/33.7	60A	1	1

**CLEARANCES**

	MINIMUM CLEARANCE FROM COMBUSTIBLE SURFACES		SUGGESTED MINIMUM SERVICE CLEARANCE	
BACK	0 INCH	0 MM	0 INCH	0 MM
LEFT	1 INCH	25 MM	12 INCHES	305 MM
RIGHT	1 INCH	25 MM	6 INCHES	152 MM
FRONT	1 INCH	25 MM	24 INCHES	610 MM
TOP	1 INCH	25 MM	24 INCHES	610 MM
BOTTOM	REQUIRED CLEARANCE – 18 INCHES/457 MM			

## MECHANICAL INSTALLATION

### CAUTION

Electro Industries Inc. requires the use of dielectric isolation between the boiler vessel supply and return piping when the boiler is plumbed using copper or any other dissimilar metal. Damage to the vessel caused by galvanic corrosion voids Electro Industries' warranty.

Reference drawing BX305

The plumbing components and piping layout shown on drawing BX305 has been very carefully picked and should be plumbed as shown. When following this diagram, the water fill procedure becomes very simple and almost guarantees the removal of all air or prevents air locking problems. Experienced hydronic heating installers may be able to eliminate components such as regulated fill valve, check valve, temperature gauge, etc., but the inclusion of these components guarantees installation and initial operating success.

The key mechanical components required include:

- **Boiler/Plumbing Kit Placement** – This model series is wall hung and the vessel must be vertical.
  - The plumbing kit items are located adjacent to the boiler housing itself as shown on drawing BX305.
  - For future servicing, the unit itself must be installed a minimum of 18” above the floor. The elements are screwed in from the bottom.
  - Allow adequate space for cover removal and maintenance.
- **Expansion Tank** - As a closed loop hydronic heating system, a minimal expansion tank is required. This can be an air diaphragm tank as provided in the plumbing kit or a basic “empty” tank where air is compressed at the tank top.
- **Temperature/Pressure Gauge** - Recommended to observe the operation of the system. Actually a temperature gauge at the inlet and outlet is desirable.
- **Pressure Safety Valve** - This is required at the hot outlet and is furnished as a **loose** component with the boiler unit itself. Failure to install the provided, 30 PSI, pressure relief valve as shown voids warranty and product listing.

Add the necessary pipe extension from the relief valve to the floor to prevent water damage on this unit or surrounding area.

- **Gate Valve/Drain Valve** - These are for servicing and easy fill purposes.
- **Circulating Pump** - Depending upon system lift and system loop resistance (feet of head), the proper circulating pump is required to guarantee the minimum GPM flow as specified on the cover sheet.

**Comment:** Circulator pump can be in the outlet or inlet. However, the circulator pump should “pump away from” the expansion tank.

- **Air Vent** – Whenever there is a plumbing point higher than any of the components shown or an adjacent line (any vertical “U” trap), an air vent valve should be provided.
- **Building Water Supply Connection** – Reference drawing BX305, note 4, some local building codes require sophisticated check valve or anti-siphon check valve when the hydronic heating system is permanently connected to the domestic water system. The intent of this connection is temporary and for fill purposes only. The installer has the responsibility of complying with local building codes.

## ELECTRICAL HOOKUP

Reference drawing BH310

### **WARNING**

DISCONNECT ALL ELECTRICAL POWER BEFORE ELECTRICALLY CONNECTING OR SERVICING THE UNIT. FAILURE TO DISCONNECT THE ELECTRICAL POWER BEFORE WORKING ON THIS PRODUCT CAN CREATE A HAZARD LEADING TO PERSONAL INJURY OR DEATH.

1. **Panel breaker sizes** – based upon the installed unit capacity, cover page shows model number/amps/kW, service from appropriate size panel breaker based on NEC code.
2. Now the larger size EMB-S model series includes a factory provided circuit breaker. This **qualifies** for a local disconnect at the product or appliance.
3. **240/208-Volt Power Source** – route and install the proper current carrying conductors, suggested by local codes, from service panel fuse or circuit breaker. Nameplate shows current & KW rating. Use only copper wire within this unit enclosure or at the circuit breaker connection.

The source is either from the standard service panel or may be part of an off-peak separately metered panel/CT metered enclosure. Consult with local utility if questions on off-peak installations.

### **WARNING**

USE ONLY COPPER WIRE FOR CONNECTION TO THE CIRCUIT BREAKER TERMINALS AND INSIDE THIS PRODUCT'S CABINET.

### **WARNING**

TO AVOID THE RISK OF ELECTRIC SHOCK OR DEATH, WIRING TO THE UNIT MUST BE PROPERLY GROUNDED. FAILURE TO PROPERLY GROUND THE UNIT CAN RESULT IN A HAZARD LEADING TO PERSONAL INJURY OR DEATH.

**NOTE:** This model series is designed and equipped for 240-volt residential single phase. If this unit is used on 208-volt, energy capacity is reduced by approximately 25%. The installed transformer has a primary tap for 208-volt. Rewire internal transformer so the boiler is using this primary tap for 208-volt applications.

4. **Circulating Pump** – the orange pigtail wires, at the control board cube relay, represent a switch closure (see drawing – 10-amp maximum) to operate the circulating pump motor. **Voltage for the pump must come from a separate source.** Wiring entrance must be left KO, do not combine with thermostat cable or other control wiring.
5. **Operating Thermostat** – zone valve dry contact end switch is an operating contact, direct wired thermostats include:
  - **Standard Mechanical** – connect to control board “R” and “W”. **Important!** -Set thermostat internal heat anticipator to 0.2.
  - **Slab or Digital Thermostats** – 3-wire connection required.
    - R to R, W to W, C to C, green to ground
  - **Power robbing thermostats** – power robbing thermostats cannot be used with the EMB-S Mini-Boiler.

6. **Load Management Interrupt Control (LMC)** – this Mini-Boiler product has been pre-wired and designed for a power company load management receiver connection. The control board has either a pair of blue and blue/white wires or a terminal block labeled TB2 for this connection.
  - A. Remove wire-nut from blue pigtail wires or remove jumper from TB2.
  - B. Connect wires from the power company load control device to the blue and blue/white wires or terminal block TB2.
 

**Optional** – as shipped, this unit is only equipped for off-peak = N.C. logic. If reversed logic is required, contact the factory for modification.

**Optional** – if load management is not used, simply leave the blues wire-nutted or TB2 jumped as shipped from manufacturer.

**Optional** – if the power company disconnects 240V for load control, please reference BH029 for special wiring requirements.
7. **Zone Valve** – the installer may elect to totally wire in the zone valves where paralleling the end switches activate the control board R and W. Now this EMB-S Series has a 40VA 24-volt transformer which is capable of driving 1 or 2 external zone valves.
8. **Inspection/final check** – Verify all electrical connections are tight (including factory connections), verify there is proper spacing between all power and electrical wire/terminals, and verify top high limit manual reset is “in”. During shipping freight vibration there are times when the boiler vessel top manual reset high limit is “popped out”.

### **WATER ADDITIVES**

1. Unless the source water is unusually poor and/or rust elements, additives are not required. It is recommended the water source as shown on drawing BX305 comes through the household water softener.
2. Impurities within a closed loop hydronic boiler are considerably less damaging than the typical domestic water heater. In a closed loop electric boiler, the water impurities “boil out” and the system essentially reverts to pure water. As a closed system, this “pure water” becomes the operating mode. In the case of domestic water tank, there is always new water entering with new impurities.
3. However, if additives are required, use the recommendations and source from your local professional plumber, specializing in hydronic heating systems.

### **WATER FILL PROCEDURE**

The following procedure only applies to the prepackaged plumbing kit and/or when the system is plumbed exactly as shown on drawing BX305.

1. Do not apply 240/208-volt heating power during water fill sequence.
2. Connect the temporary household water supply source (probably hose connection) to the "supply water connection" input.
 

**NOTE:** If supply water connection is permanent, some local building codes may require special anti-siphon check valve, PRZ check valve, or equivalent between the Mini Boiler fill regulator and the domestic water source or the city water connection.
3. Connect a drain hose to lower hose bib, "drain valve".
4. **Open** "drain valve" and **close** "inlet gate valve" (between drain valve and boiler bottom inlet).
5. Verify “top gate valve” is **open**.



6. **Open** "water supply valve" and **open** household water supply source.  
This may be at normal household pressure (40 to 60 PSI), the auto-fill valve regulator keeps the hydronic loop at its proper low pressure.
7. Allow system to circulate, discharging through drain valve, **for at least 10 minutes**.
8. Put your ear against the metal pipe and listen for air bubbles. If the water flow is consistent and quiet, the system is probably purged and water filled.
9. **Close** the "drain valve". **Open** the "inlet gate valve".
10. The cold system pressure at the gauge should be approximately 10 to 14 PSI.
11. **Close** "water supply valve" and disconnect water supply.
12. Optional – The circulating pump can be energized during this fill operation by having the 240/208-volt power main source breaker off and simply jumpering the 2 screw terminals for the pump wire connection.


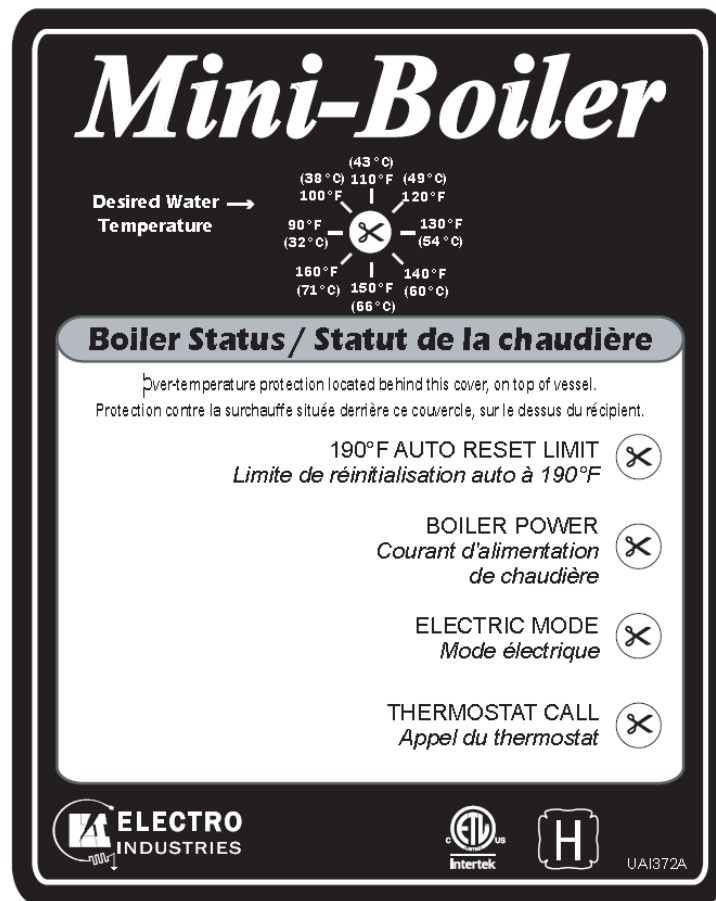


Figure 1

## OPERATIONAL TIPS


1. Indicator lights – there is a set of four indicator lights on the front cover. Figure 1 is a reproduction of the front decal giving definition and information for using these indicator lights.
2. **Boiler Power** green LED indicates 24-volt is present on the control board and is continuous on. Off could mean no 240/208-volt power, open manual reset (vessel top), open fuse, or bad transformer. Also indicates supply sensor condition (solid = good, pulse = faulty).
3. 240/208-volt element power current flow can only be measured when the external operating thermostat is calling for heat. There is a 30-second delay before stage 1 turns on, this allows the pump to circulate and sample temperature. Stage 2 will depend upon the temperature differential at the sensor in the supply pipe, see page 9 sequence (assumes off-peak mode).
4. **Thermostat Call** red LED indicates a thermostat call for heat is present at the control board.
5. **Electric Mode** yellow LED indicates the status of an external utility control. This LED is normally on with Thermostat Call. When connected to an external utility control and an interrupt is active, this LED will be off and the boiler will not heat.
6. The **190°F Auto Reset Limit** red LED is on when the vessel top hi-limit switch is open.
7. Via a small pin jumper arrangement on the control board, the circulator pump can be a direct function of the “W” input **or** interrupted by the load control device (even though there is a W input). This diagram illustrates this pin jumper arrangement. This unit is factory setup in the “W” position meaning the pump will always run as a direct function of “R” to “W” operating thermostat. By simply moving this black 2-position jumper to the “L” the pump will be turned off during load control interrupt.
8. At outlet temperatures of approximately 120° F, the maximum system pressure should be approximately 18 PSI (124 kPa). If the PSI (or kPa) increase from cold water to operating hot water is more than approximately 3 to 4 PSI (20.6 to 27.5 kPa), the expansion tank is too small, or there is air in the system.
9. At the top of the vessel is a manual reset, 205° F, primary hi-limit. This is behind the upper control board cover, at the top of the vessel. At the end of the two red/blk wires there is a small red stem between the wire tabs. This is the reset button.
10. Check for water leaks and repair as required.
11. If flow seems to be a concern, determine both inlet and outlet water temperature and apply GPM (L/min) formula detailed in previous section “Information/Water Flow Calculations”.

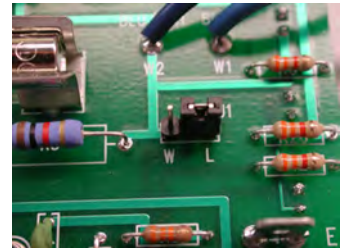

## AQUASTAT OPERATION

Determine from floor tubing supplier design outline the desired floor temperature. Typically this relates to floor covering and tube placement design. Set the aquastat set point for desired warm water outlet.

The front temperature set point is selected by a small screwdriver dial switch.

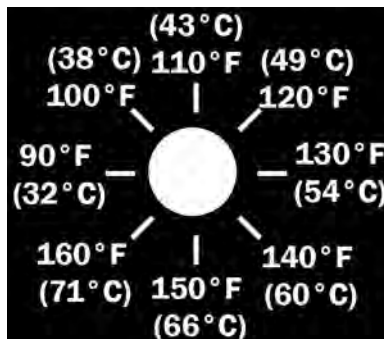

## TROUBLESHOOTING HELPS

**Inside monitor** – there are two red LED's on the inside labeled "STG1" and "STG2". Each LED is an indication of stages of boiler on/off.

Located near the thermostat connection is a red LED labeled "MANUAL-HL-OK". This LED represents the 205° F manual reset. If on, manual hi-limit is closed. If off, manual hi-limit is open.

**Sequence** – depending upon temperature difference between actual measured water temperature, desired temperature (set point), and system flow, second stage may be delayed turning on for periods of four minutes or greater.

**Mechanical hi-limit, top vessel screw-in, automatic reset** – this is at about 190° F, opens the red/white wire loop. This can be monitored by the "Auto Reset" front indicator light. As the water cools to approximately 160° F it should self-reset and restart.

**Manual reset limits** – surfaced mounted to the top of the vessel, opens at 205° F. This opens all 24V control power thus opening all element power relays. The observed action is the same as a blown fuse, no front panel boiler power green LED.

To reset this device, simple press the red button.

**Comment:** The hi-limit auto reset red LED is only operational during an active heat call (lower red LED on).

### WARMFLO® TEMPERATURE BYPASS TROUBLESHOOTING OR TESTING

Adding a jumper between "W" screw terminal and tab marked "E" bypasses the temperature sensing and WarmFlo control. In other words, with the jumper installed, a "W" input represents both stages, full on.

**Note:** Basic 24V power must be present for the E-tab function to work.

### Flow Switch Statement


A flow switch is not included with the boiler. However, one can be added to the LMC circuit. Simply place the field provided flow switch in series with this circuit.

**NOTE:** The "L/W" (J3) jumper must be in the "W" position.

### AVAILABLE, ELECTRO INDUSTRIES, INSTALL PARTS OR KITS

EMB-BK	MINI-BOILER PLUMBING KIT BASIC
EMB-PK	MINI-BOILER INSTALL KIT PREFERRED
EMB-P2	PUMP KIT 1/25HP BOILER
WFS2	TEMPERATURE WATER SENSOR
EMBS5636	REPLACEMENT CONTROL BOARD
5128C	ELEMENT RELAY
5541	TRANSFORMER, 24V/40VA
5576	AIR ELIMINATOR 3/4" ROLLAIRTROL
5456A	GAUGE PRES/TEMP 75 PSI/320DG F .25"
5453	VALVE RELIEF 30 PSIG .75" NPT MALE
5590	EXPANSION TANK 40K BTU 20.1 GALLON

# "BASIC" MECHANICAL PIPING DIAGRAM

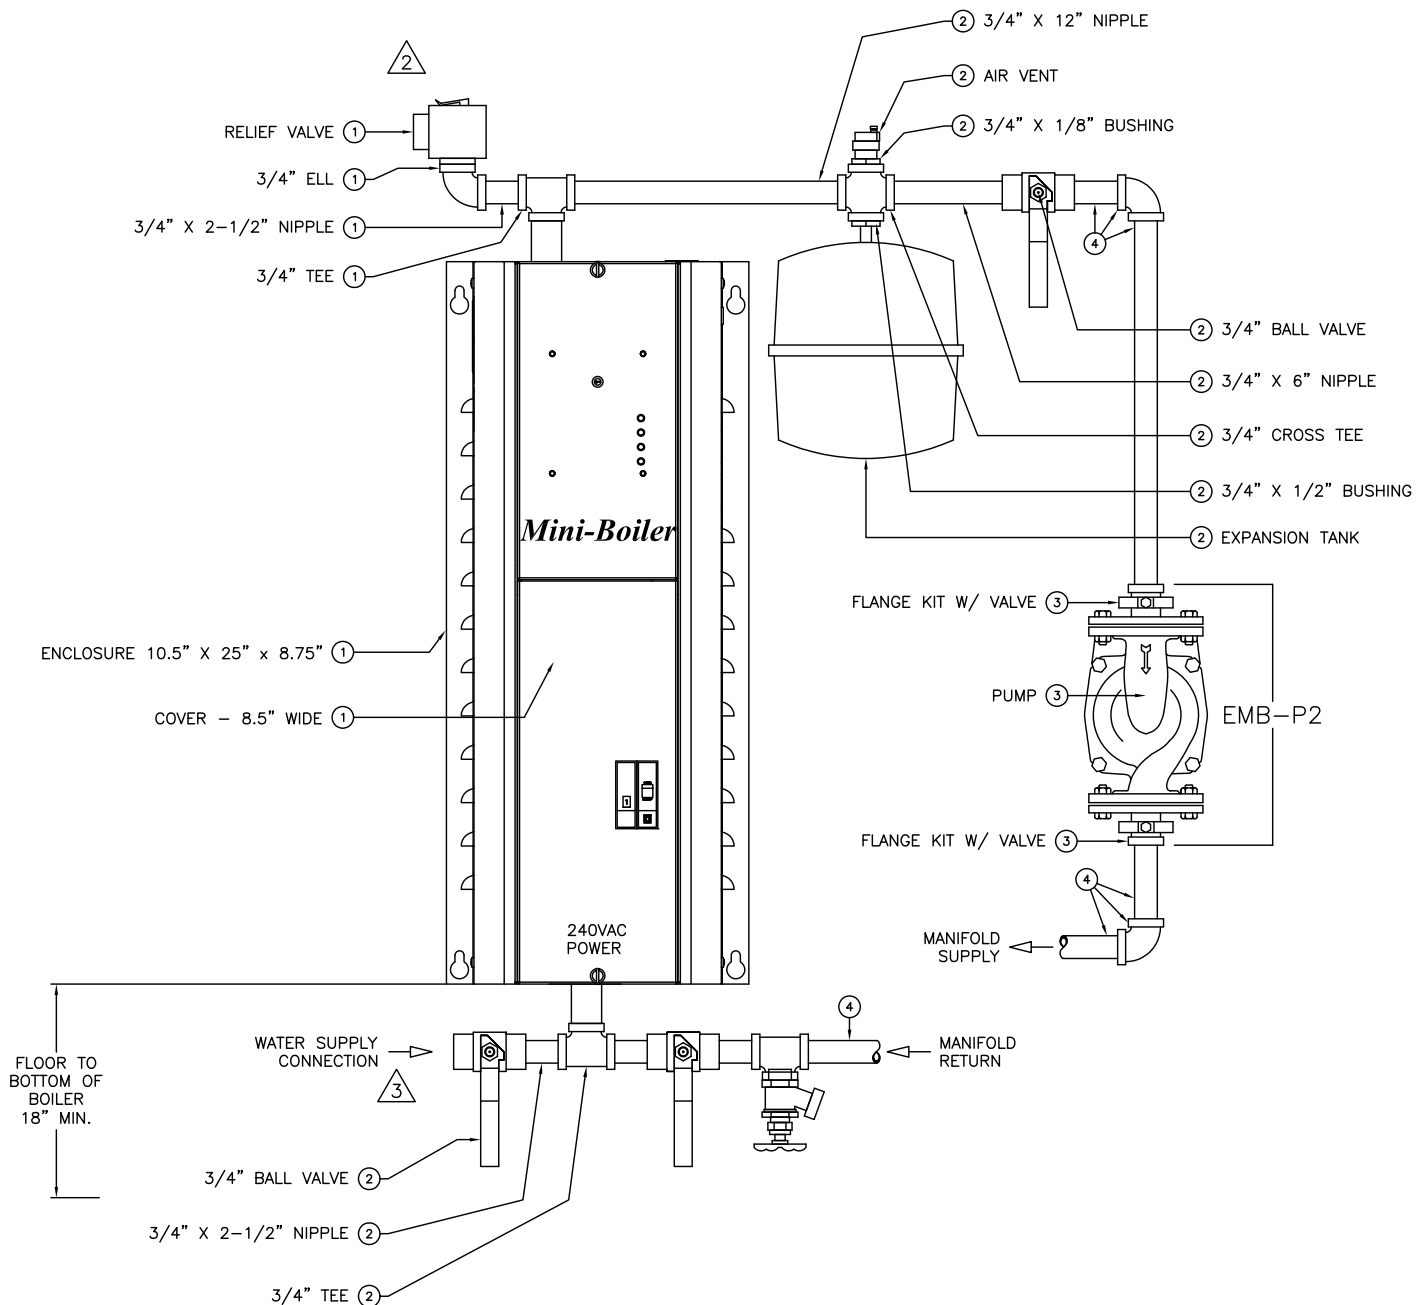


**LEGEND**

- ① COMPONENTS INCLUDED WITH EMB-S-\* and EMB-H-\*
- ② COMPONENTS INCLUDED WITH EMB-BK KIT
- ③ COMPONENTS INCLUDED WITH EMB-P2 (PUMP) KIT
- ④ COMPONENTS NOT INCLUDED, SHOWN FOR REFERENCE ONLY

**NOTES:**

1. INSTALLATION KIT (PART NUMBER EMB-BK) INCLUDES ALL PIPING PARTS (LESS PUMP & FLANGES) EXTERNAL TO THE 9.5" X 30" X 7" ENCLOSURE.
2. ADD NECESSARY DRAIN PIPE.
3. SEE INSTRUCTION MANUAL FOR PRESSURE CONCERNS AND MAY NEED BACKFLOW PREVENTER.

# "PREFERRED" MECHANICAL PIPING DIAGRAM

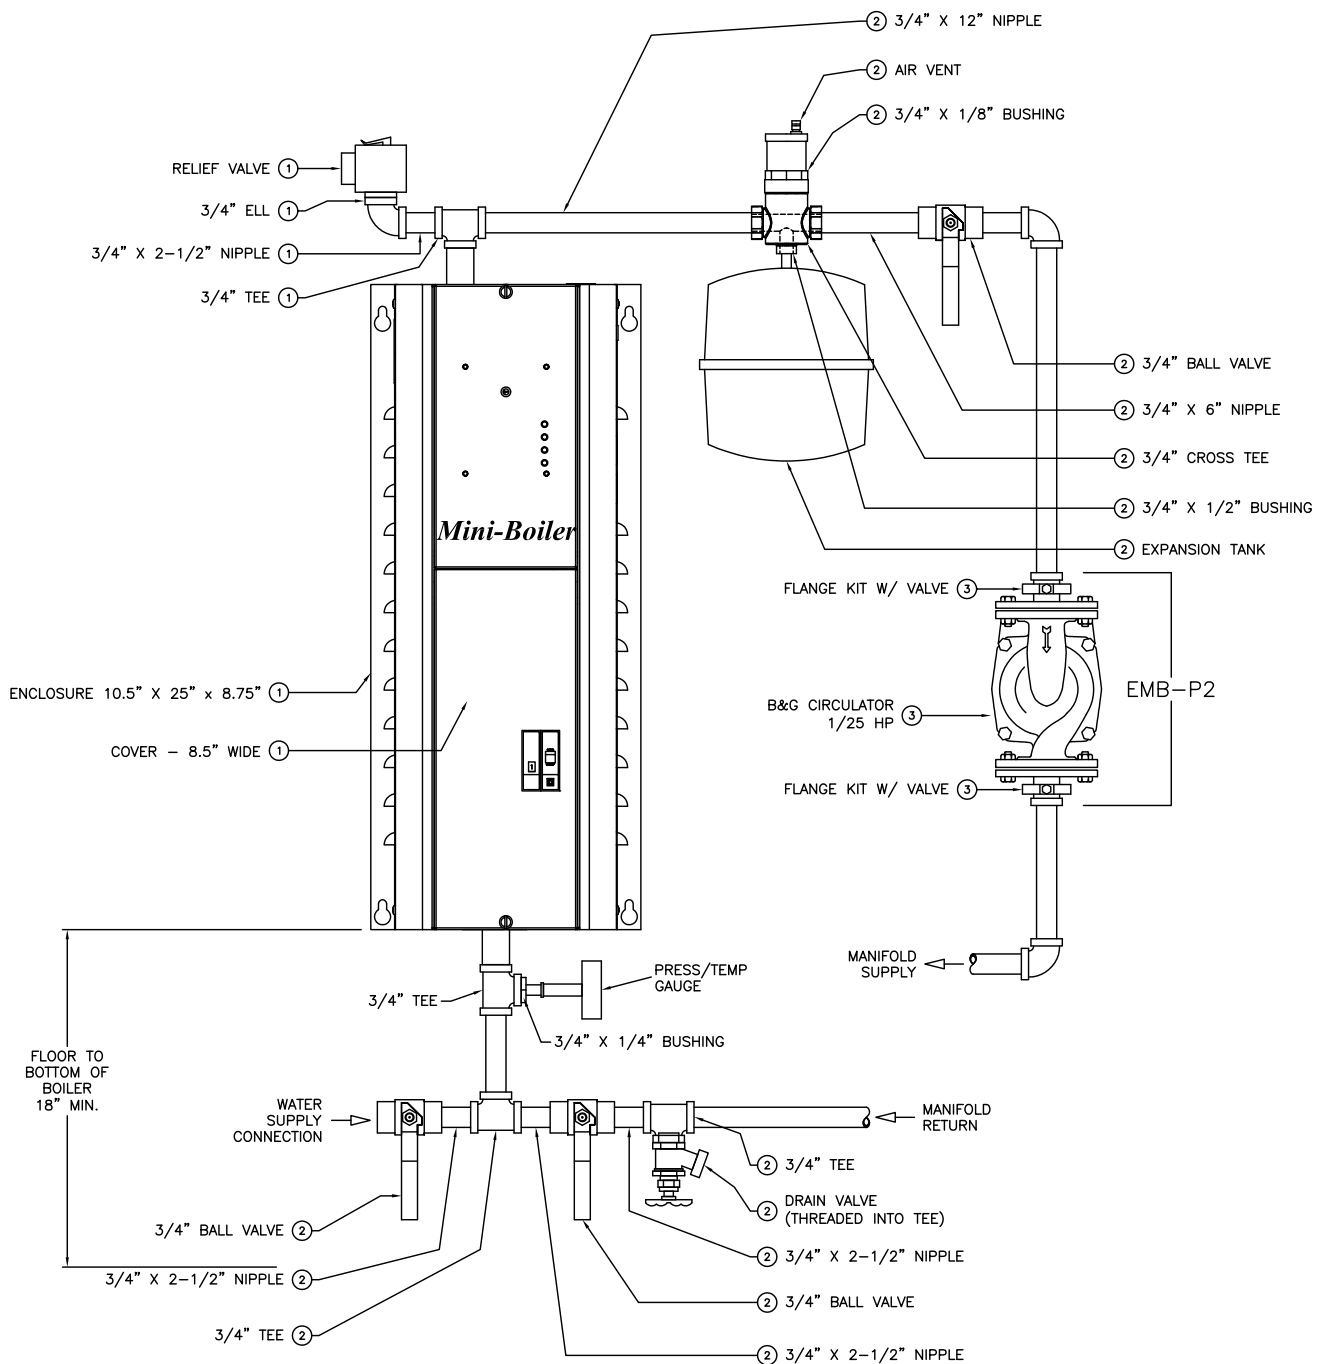

**LEGEND**

- ① COMPONENTS INCLUDED WITH EMB-S-\* and EMB-H-\*
- ② COMPONENTS INCLUDED WITH EMB-PK KIT
- ③ COMPONENTS INCLUDED WITH EMB-P2 (PUMP) KIT
- ④ COMPONENTS NOT INCLUDED, SHOWN FOR REFERENCE ONLY






DECAL + TITLEBLOCK

5.00"

5.50"

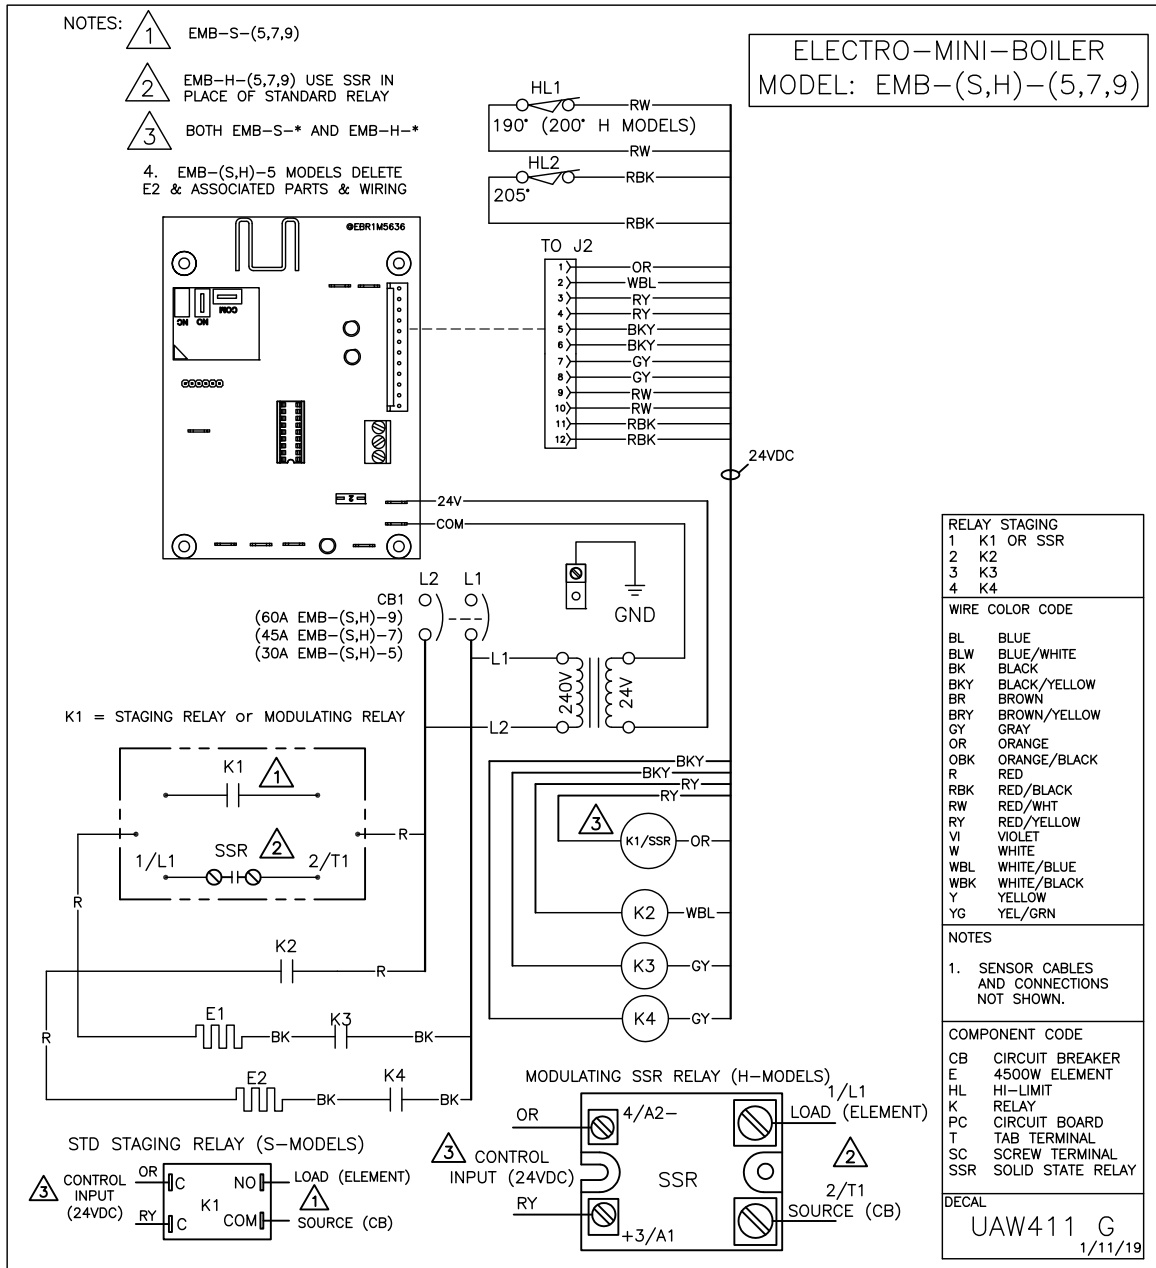

NOTES:

1. SIZE = 5.5" X 5"
2. COLOR = BLACK ON WHITE
3. MATERIAL = POLY WITH ADHESIVE AND LAMINATE.

- Rev. G 3/4/19: Revise text on relay details  
 Rev. G 1/11/19: Add Std Relay detail, change models to 5,7,9 only  
 Rev. F 12/4/18: Add "3" and "4" to SSR  
 Rev. E 10/2/18: Revise view for UPCB5536J and UURLY9039C  
 Rev. D 6/11/18: Show SSR detail, show K1/SSR option  
 Rev. C 3-17-14: Decal was for EMB-S-5 only  
 Rev. B 05-13-08: Updated For Addt'l Relays.  
 Rev. A 02-07-08: Released For Production.

PROPRIETARY AND CONFIDENTIAL NOTE: THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ELECTRO INDUSTRIES INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ELECTRO INDUSTRIES INC. IS PROHIBITED.	DESCRIPTION EMB-(S,H)-(5,7,9) WIRING DECAL	ELECTRO INDUSTRIES, INC. MONTICELLO, MN 55362	SHEET	SCALE	PART/MODEL NUMBER
			1/1	NTS	EMB-(S,H)-(5,7,9)
			DATE	REV/STATUS	DOCUMENT NUMBER
			03-17-14	G	UAW411



# BOILER ACCESSORIES

---

## ZONE CONTROLLER

This will simplify your wiring and make zoning applications much easier. In addition, enhanced communicating features have the ability to stage the electric boiler based upon the connected zone capacity.

### Standard Features

- Utility load control
- Terminal block wiring, visual wiring layout
- Indicator lights showing zone operation
- 24-volt, 40VA transformer 120/208/240 connection
- Fuse protection
- Priority option
- Dual temperature operation
- Applies to digital or standard thermostats
- Dial switch, select each zone capacity



### Pumps, Actuators, Valves

- EB-ZTA-1 - install within boiler cabinet
- EB-ZEA-1 - with enclosure and 40VA transformer
- EB-ZEA-2 - add additional 4, enclosure and 40VA transformer

### Pumps

- EB-ZEA8 - with enclosure and 40VA transformer for 8 zone pumps

### Zone Valves

- EB-ZTS-1 - install within boiler cabinet, encl. option
- EB-ZTS-2 - add additional 4, enclosure and 40VA transformer
- EB-ZES8 - with enclosure, no transformer, for 8 zone valves

---

## SWITCHING RELAY - EE-5051

This DPDT 24-volt switching relay provides a convenient solution to any AC or DC application.



- **Ideal for zone pumps**
- 24V coil
- 120V, 10A, contact sets
- Easy to wire and nicely packaged

---

## MULTI-BOILER - EB-C-STG5

Electrically connects between 2<sup>nd</sup> and 3<sup>rd</sup>, 3<sup>rd</sup> and 4<sup>th</sup>, etc.

### OTHER OPTIONS

- SOT-1 Switchover to standby, total run time
- 5701 Single feed bus for 2 CB's (SQ-D CB)
- 5702 Single feed bus for 3 CB's (SQ-D CB)
- EB-S-SB Dual boiler option for EB-S Series
- WF-ANZ7 WarmFlo Analyzer, now applicable to WO and WA Series



**ELECTRO  
INDUSTRIES**

Monticello, Minnesota  
800.922.4138  
www.electromn.com

## TWO SUPPLY WATER TEMPERATURE REQUIREMENT

- Handled as the priority zone on multi-zone (EB-ZEA-1)
- Priority switch on, zone 1 active - TS boiler automatically changes to 150° (or selection 176°) supply water setting
- All other zones are held off
- With zone 1 satisfied or 60-minute timeout, the boiler automatically returns to the preset temperature and reacts to the other zones

Low Temp	High Temp
Radiant, slab	Radiant, staple up
Radiant, slab	Baseboard
Radiant, slab	Fan coil
Radiant, slab	Water heater, side arm
Radiant, slab	Hanging unit heater (garage, shop, etc.)

## INSTALLATION PLUMBING KITS

These installation kits provide the critical plumbing components needed for easy installation of the Electro-Boiler. **In addition** to the items shown in the matrix below, each kit includes all necessary ball valves, drain valve, tees, elbows, nipples, bushings, couplings, etc. for direct connection to circulator pump and/or manifold.

Electro Industries' boilers come standard equipped with outlet temperature/pressure gauge, pressure relief safety valve, and when applicable, the WarmFlo™ electronic control sensors. These kits provide the additional components for easy installation:

Model	Application	Return Gauge	Expansion Tank	Air Vent
EMB-BK	All EMB Series		2.1 gal. (7.9 L), 40,000 Btu/h	Basic float type
EMB-PK	All EMB Series	✓	2.1 gal. (7.9 L), 40,000 Btu/h	Enhanced air separator, EAS
EB-PK-M	EB-MS, -MA, -MO Series	✓	4.5 gal. (17 L), 135,000 Btu/h	Enhanced air separator, EAS
EB-BK-TS	EB-S, -WA, -WO Series		4.5 gal. (17 L), 135,000 Btu/h	Basic float type
EB-PK-TS	EB-S, -WA, -WO Series	✓	4.5 gal. (17 L), 135,000 Btu/h	Enhanced air separator, EAS

## CIRCULATING PUMPS



**5585 - Mini-Boiler & 10 kW TS Series**

- 120V, 1/25 HP, maintenance-free wet rotor circulator
- Pump curve example - 5 GPM (19 L) @ 11 ft. of head (32.9 kPa)



**5586 - TS Series, Standard**

- 120V, 1/6 HP, maintenance-free oil lubricated circulator
- Pump curve example - 10 GPM (37.8 L) @ 20 ft. of head (50.8 kPa)



**5578 - 3/4" Pipe  
5582 - 1" Pipe  
5579 - 1-1/4" Pipe**

- Two flanges, with isolation valve

# Electro Industries, Inc. Residential Limited Product Warranty

Effective November 1, 2009

Electro Industries, Inc. warrants to the original owner, at the original installation site, for a period of two (2) years from date of original purchase, that the product and product parts manufactured by Electro Industries, Inc. are free from manufacturing defects in materials and workmanship, when used under normal conditions and when such product has not been modified or changed in any manner after leaving the plant of Electro Industries, Inc. If any product or product parts manufactured by Electro Industries, Inc. are found to have manufacturing defects in materials or workmanship, such will be repaired or replaced by Electro Industries, Inc. Electro Industries, Inc., shall have the opportunity to directly, or through its authorized representative, examine and inspect the alleged defective product or product parts. Electro Industries, Inc. may request that the materials be returned to Electro Industries, Inc. at owner's expense for factory inspection. The determination as to whether product or product parts shall be repaired, or in the alternative, replaced, shall be made by Electro Industries, Inc. or its authorized representative.

Electro Industries, Inc. will cover labor costs according to the Repair / Replacement Labor Allowance Schedule for a period of ninety (90) days from the date of original purchase, to the original owner, at the original installation site. The Repair / Replacement Labor Allowance is designed to reduce the cost of repairs. This Repair / Replacement Labor Allowance may not cover the entire labor fee charged by your dealer / contractor.

## **TWENTY YEAR (20) LIMITED WARRANTY ON BOILER ELEMENTS AND VESSELS**

Electro Industries, Inc. warrants that the boiler elements and vessels of its products are free from defects in materials and workmanship through the twentieth year following date of original purchase. If any boiler elements or vessels are found to have a manufacturing defect in materials or workmanship, Electro Industries, Inc. will replace them.

## **TWENTY YEAR (20) LIMITED WARRANTY ON SPIN FIN ELEMENTS**

Electro Industries, Inc. warrants that the spin fin elements of its products are free from defects in materials and workmanship through the twentieth year following date of original purchase. If any spin fin elements are found to have a manufacturing defect in materials or workmanship, Electro Industries, Inc. will replace them.

## **FIVE YEAR (5) LIMITED WARRANTY ON OPEN WIRE ELEMENTS**

Electro Industries, Inc. warrants that the open wire elements of its products are free from defects in materials and workmanship through the fifth year following date of original purchase. If any open wire elements are found to have a manufacturing defect in materials or workmanship, Electro Industries, Inc. will replace them.



## CONDITIONS AND LIMITATIONS:

1. This warranty is limited to residential, single family dwelling installations only. Any commercial or multi-unit dwelling installations fall under the Electro Industries Commercial Limited Product Warranty.
2. Electro Industries, Inc. shall not be liable for performance related issues resulting from improper installation, improper sizing, improper duct or distribution system, or any other installation deficiencies.
3. If at the time of a request for service the original owner cannot provide an original sales receipt or a warranty card registration then the warranty period for the product will have deemed to begin the date the product is shipped from the factory and **NOT** the date of original purchase.
4. The product must have been sold and installed by a licensed electrician, plumbing, or heating contractor.
5. The application and installation of the product must be in compliance with Electro Industries, Inc. specifications, as stated in the installation and instruction manual, and all state, provincial and federal codes and statutes. If not, the warranty will be null and void.
6. The purchaser shall have maintained the product in accordance with the manual that accompanies the unit. Annually, a qualified and licensed contractor must inspect the product to assure it is in proper working condition.
7. All related heating components must be maintained in good operating condition.
8. All lines must be checked to confirm that all condensation drains properly from the unit.
9. Replacement of a product or product part under this limited warranty does not extend the warranty term or period.
10. Replacement product parts are warranted to be free from defects in material and workmanship for ninety (90) days from the date of installation. All exclusions, conditions, and limitations expressed in this warranty apply.
11. Before warranty claims will be honored, Electro Industries, Inc. shall have the opportunity to directly, or through its authorized representative, examine and inspect the alleged defective product or product parts. Remedies under this warranty are limited to repairing or replacing alleged defective product or product parts. The decision whether to repair or, in the alternative, replace products or product parts shall be made by Electro Industries, Inc. or its authorized representative.

## THIS WARRANTY DOES NOT COVER:

1. Costs for labor for diagnosis, removal or reinstallation of an alleged defective product or product part, transportation to Electro Industries, Inc., and any other materials necessary to perform the exchange, except as stated in this warranty. Replacement material will be invoiced to the distributor in the usual manner and will be subject to adjustment upon verification of defect.
2. Any product or product part that has been damaged as a result of being improperly serviced or operated, including, but not limited to, the following: operated during construction phase, with insufficient water or air flow; allowed to freeze; subjected to flood conditions; subjected to improper voltages or power supplies; operated with air flow or water conditions and/or fuels or additives which cause unusual deposits or corrosion in or on the product; chemical or galvanic erosion; improper maintenance or subject to any other abuse or negligence.
3. Any product or product part that has been damaged as a result of natural disasters, including, but not limited to, lightning, fire, earthquake, hurricanes, tornadoes or floods.
4. Any product or product part that has been damaged as a result of shipment or handling by the freight carrier. It is the receiver's responsibility to claim and process freight damage with the carrier.
5. Any product or product part that has been defaced, abused or suffered unusual wear and tear as determined by Electro Industries, Inc. or its authorized representative.
6. Workmanship of any installer of the product or product part. This warranty does not assume any liability of any nature for unsatisfactory performance caused by improper installation.
7. Transportation charges for any replacement product, product part or component, service calls, normal maintenance; replacement of fuses, filters, refrigerant, etc.

**THESE WARRANTIES DO NOT EXTEND TO ANYONE EXCEPT THE ORIGINAL PURCHASER AT RETAIL AND ONLY WHEN THE PRODUCT IS IN THE ORIGINAL INSTALLATION SITE. THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE.**

**ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED WITH RESPECT TO ALL PURCHASERS OR OWNERS. ELECTRO INDUSTRIES, INC. IS NOT BOUND BY PROMISES MADE BY OTHERS BEYOND THE TERMS OF THESE WARRANTIES. FAILURE TO RETURN THE WARRANTY CARD SHALL HAVE NO EFFECT ON THE DISCLAIMER OF THESE IMPLIED WARRANTIES.**

**ALL EXPRESS WARRANTIES SHALL BE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTIES SET FORTH HEREIN AND EXCLUDE ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE BREACH THEREOF. SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY. PRODUCTS OR PARTS OF OTHER MANUFACTURERS ATTACHED ARE SPECIFICALLY EXCLUDED FROM THE WARRANTY.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY UNDER THE LAWS OF EACH STATE. IF ANY PROVISION OF THIS WARRANTY IS PROHIBITED OR INVALID UNDER APPLICABLE STATE OR PROVINCIAL LAW, THAT PROVISION SHALL BE INEFFECTIVE TO THE EXTENT OF THE PROHIBITION OR INVALIDITY WITHOUT INVALIDATING THE REMAINDER OF THE AFFECTED PROVISION OR THE OTHER PROVISIONS OF THIS WARRANTY.**